

Before installation



A. Please check below installation information to make sure that this product can be installed to the car.

[www.skott-audio.com](http://www.skott-audio.com)  
[www.skottaudio.com](http://www.skottaudio.com)  
[support@skott-audio.com](mailto:support@skott-audio.com)

Connecting Cable to Steering Remote Control Interface for CAN BUS

Step 1.

- 1.1 Connect Steering Remote Interface's Orange wire to ACC12V
- 1.2 Connect the black and blue wire of the Steering Remote Interface to GND \*[1]



Look plug the power cord  
 Remove the key before  
 installation.



Step 2.

- 2.1 Connect the Steering Remote Interface's Red wire and Brown wire to Can+ And Can- according to the picture as shown below.

<p><b>BMW E60 Series 5</b></p> <p>Connect the brown wire to yellow. (CAN-) Pin9                  Connect the red wire to black. (CAN+) Pin11</p>	<p><b>BMW E90 Series 3</b></p> <p>Connect the brown wire to green. (CAN-) Pin9                  Connect the red wire to orange. (CAN+) Pin11</p>	<p><b>BMW-E65 Series 7</b></p> <p>Connect the brown wire to green. (CAN-) Pin9                  Connect the red wire to orange. (CAN+) Pin3</p>	
<p><b>WDB203 C-CLASS, WDB211 E-CLASS</b>  <b>WDD204 C-CLASS, WDD212 E-CLASS</b></p> <p>Connect the brown wire to brown. (CAN-) Pin9                  Connect the red wire to brown stripes red. (CAN+) Pin11</p>	<p><b>Mercedes-Benz CAN (WDB210 &amp; Other)</b></p> <p>Connect the brown wire to brown. (CAN-) Pin2 (CLK W208 black)                  Connect the red wire to brown stripes red. (CAN+) Pin1 (CLK W208 black stripes white)</p>	<p><b>Peugeot RCZ , 408</b></p> <p>Connect the red wire to purple. (CAN+) Pin10                  Connect the brown wire to brown. (CAN-) Pin13</p>	<p><b>AUDI , Volkswagen</b></p> <p>Connect the red wire to orange stripes purple. (CAN+) Pin9                  Connect the brown wire to orange stripes brown. (CAN-) Pin10</p>
<p><b>VOLVO S60 S80 V70</b></p> <p>Connect the brown wire to green. (CAN-) Pin6                  Connect the red wire to white. (CAN+) Pin5</p>	<p><b>VOLVO XC70 XC90</b></p> <p>Connect the brown wire to green. (CAN-) Pin7                  Connect the red wire to white. (CAN+) Pin5                  And Jump wire white to white Pin 5,6                  Green to green Pin 7,8</p>	<p><b>CHYSLER 300C</b></p> <p>Connect the brown wire to white (CAN-) Pin6                  Connect the red wire to white stripes orange. (CAN+) Pin7</p>	<p><b>DODGE JOURNEY</b>  <b>JEEP WRANGLER Y2011</b>  <b>JEEP GRAND CHEROKEE Y2011</b></p> <p>Connect the brown wire to white stripes orange. (CAN-) Pin13                  Connect the red wire to white stripes gray. (CAN+) Pin2</p>
<p><b>All New CIVIC CR-V</b> With out DVD                  With DVD</p> <p>PLUG ON THE BACK RADIO</p> <p>Connect the brown wire to Blue. (CAN-) Pin 8 For CR-V White                  Connect the red wire to Pink. (CAN+) Pin 18 For CR-V Red</p>	<p><b>All New CIVIC CR-V</b> With DVD</p> <p>PLUG ON THE BACK MID MONITOR</p> <p>Connect the brown wire to Blue. (CAN-) Pin 2 For CR-V White                  Connect the red wire to Pink. (CAN+) Pin 18 For CR-V Red</p>	<p><b>CHEVROLET CRUZE , Sonic</b></p> <p>Connect the red wire to Green. (CAN+) Pin31</p>	<p><b>FIAT 500</b></p> <p>Connect the brown wire to white (CAN-) Pin7                  Connect the red wire to blue. (CAN+) Pin8</p>

**Please note** that some versions of car Wire could be brown and red stripe stranded, and for some MercedesBenz S-class bus lines may be light Green wire (CAN+) and White wire (CAN-). It may not be at the back of the radio, could be at air-con cavity.

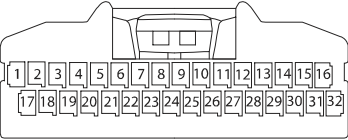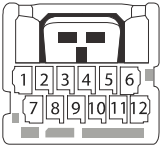

<p><b>All New CIVIC CRV</b> Connector Blue Tooth With out DVD</p>  <p>Connect the Blue wire to Pin 1 ** [2] Connect the Green wire to Pin 2</p> <p>Location of Connector Blue tooth <b>CRV</b> Behind Gear , <b>CIVIC</b> Behind Inventory</p>	<p><b>All New CIVIC CRV</b> Connector Blue Tooth With DVD</p>  <p>Connect the Blue wire to Pin 4 ** [2] Connect the Green wire to Pin 3</p> <p>Location of Connector Blue tooth <b>CRV , CIVIC</b> Rear of Monitor DVD</p>		

\* [1] Incase want to use Function BlueTooth of **ALL NEW CIVIC , CRV** wire Color Green & wire Color Blue install by manual

\*\* [2] Function BlueTooth are available only 4 brand of Radio  
JVC use INFRARED cable only  
PIONEER , ALPINE , KAMAZ use Plug or wire , KENWOOD use cable Sky blue , Connect to wire Sky blue , Yellow stripe